Hoffmann Architects

Journal of architectural technology published by Hoffmann Architects, Inc., specialists in the rehabilitation of building exteriors.

Found

Performance Considerations for Historic Window Replacement and Repair

Rachel C. Palisin, PE, LEED AP BD+C and Richard W. Off, AIA

From the stained glass windows that welcome variegated light into cathedrals to the steel-framed geometric designs of Art Deco and the bold leaded glass of the Prairie style, windows have served to define the character of buildings and spaces since the advent of glazed fenestration. Not

> only do windows establish the aesthetics and ambiance of a structure, they form an integral part of the building enclosure. More than ornament, windows serve a vital role in protecting the building from the elements and in modulating the transfer of heat, moisture, and light from exterior to interior.

As windows age, their components become subject to the ravages of time and weather: sealant crumbles, wood decays, metal corrodes, glass deflects. If not properly maintained, historic win-

dows are in danger of deteriorating to the point where they are no longer salvageable. Even for those windows that have been carefully protected over the years, performance demands may raise considerations for replacement with materials that provide improved efficiency and durability. Determining a path for historic window treatment that balances aesthetics and historic integrity with contemporary performance standards can be challenging, particularly if the windows are architecturally significant.

Through thoughtfully designed and executed repairs, some historic windows can realize performance gains that extend their lifespan and improve indoor comfort. However, where deterioration is advanced, or where there is a compelling need to modernize the assembly to meet current performance standards, replacement may be warranted. In such cases, careful consideration of materials and window design is critical to respecting historic character while meeting project requirements. Decisions about wood frames versus metal or composite, insulating glazing versus single-pane, true divided lights versus applied muntins, and historical versus modern anchorage, among other considerations, require expert evaluation of the available options. Testing, both in the laboratory and in the field, is a valuable tool to verify performance and adjust the final design to meet the unique demands of the building and situation.

By applying the principles of window design with a sensitivity to the treatment of historic properties, building owners and project teams can

Rachel C. Palisin, PE, LEED AP BD+C, Senior Engineer with Hoffmann Architects, oversees structural, thermal, and building envelope analysis to develop customized historic window solutions. Richard W. Off, AIA, Project Architect, has specialized expertise in the restoration and adaptive reuse of historic and landmark structures.



A Meeting performance demands while preserving building character presents challenges for historic window projects.

develop window rehabilitation solutions that respect the original building fabric while providing lasting, reliable performance.

What Are the Principles?

Many of the performance requirements and standards that should be considered when approaching window replacement projects are governed by code. For residential projects, including single-family homes and duplexes of not more than three stories, the International Residential Code (IRC) applies; for all other commercial and residential projects, the International Building Code (IBC) and International Energy Conservation Code (IECC) are the prevailing model codes. While replacement windows must comply with the performance standards outlined in these codes, in many jurisdictions, historic and landmark buildings are exempt, so long as such windows are replaced in kind, matching historic conditions. However, the IBC still requires that safety glazing be installed in potentially hazardous locations, such as windows at enclosed fire stairs. In general, performance requirements may be organized into three main categories: energy/thermal, structural, and envelope considerations.

Energy and Thermal Performance

The thermal performance of a window is typically defined by **U-factor**, the measure of how much heat is lost or gained in an assembly by radiation and conduction. The numerical value, expressed in decimals, is the transfer rate of heat divided by the difference in temperature and is the weighted average of U-factors for the center of the glass, edge of glass, and window frame, as defined by the National Fenestration Rating Council (NFRC). The lower the U-factor, the better the energy performance. (R-value, used to measure the performance of opaque wall materials, is the opposite.) For single-pane historic windows, which have high U-factors, condensation may be an issue, particularly in environments with tightly controlled mechanical systems that limit natural ventilation.

Other common ways to evaluate energy performance with windows are **Solar Heat Gain Coefficient (SHGC)** and **Visible Light Transmittance (VLT)**. SHGC measures the amount of solar radiation that passes through window glazing, and VLT measures the amount of visible sunlight that passes through the entire window assembly. Whether a high or low SHGC or VLT



Samples of original hardware (top left) facilitate restoration and, where necessary, replacement. Existing historic hardware may be removed and restored (bottom left), then re-installed (right).

is required depends on the location and the use of the space, as there may be scenarios in which a high SHGC is preferred to allow passive heating, or a high VLT may be desired to maximize daylighting to reduce usage of electrical lighting and power. Although there are some jurisdictions that do not have specific energy codes, most building codes have minimum requirements tied to occupancy and climate.

Structural Considerations

Chapter 16 of the IBC defines structural requirements for windows, primarily regarding lateral loads due to wind and other sources. To establish a uniform design pressure, commonly given in pounds per square foot, the project's structural consultant uses a wind speed mandated by applicable builling code, with adjustment factors that account for building height, topography, exposure, and occupancy. Windows and their anchorage must be designed to withstand these pressures, along with any other loads to which they may be subject. The code also requires that window glazing itself have appropriate wind and/or other applicable lateral load resistance, and this is typically established via deflection requirements, which indicate that glass cannot bend beyond a given maximum to avoid breakage.

Certain regions, especially those susceptible to very high winds, such as hurricane-prone coastal areas, also have windborne debris resistance requirements. During storm events, various forms of unsecured debris may become windborne and can potentially impact windows, break glass, create even more debris, and potentially subject the interior of buildings to wind loads that could destabilize the structure. Building height, configuration, and proximity to the coast are all critical factors when determining wind loads on buildings.

Building Envelope Integrity

Envelope requirements for windows are essentially concerned with keeping air and water out of the building. The two main metrics for evaluating building enclosure performance are air leakage and water penetration testing, both of which test windows in pressurized chambers to determine the extent of air and water that pass from one side of a sealed window to another. Although the IECC outlines typical envelope requirements for windows, such as maximum requirements for air leakage, ratings set forth by the American Architectural Manufacturers Association (AAMA) are considered the industry standard for new windows. (Note that, as of January 2020, AAMA and IGMA have unified to create the Fenestration and Glazing Industry Alliance, or FGIA.)

According to AAMA, following a series of performance tests, new windows can be designated one of four performance classes, each of which is appropriate to a different degree of usage and type of setting:

- AW, generally used for high-rise and mid-rise buildings,
- CW, often used for mid and lowrise buildings,
- LC, typically used for multi-family dwellings, and
- **R**, used for one and two-family dwellings.

Each window class requires a different combination and quantity of tests, with decreasing performance requirements as the classes shift downward from AW to R, but all of which consider minimum structural loading, resistance to air and water infiltration, and security, or resistance to forced entry. These performance classes can apply to windows of any material, although the highest classes are commonly achieved with steel- and aluminumframed windows. The code does not require a specific window class for any particular situation, but it does require an AAMA 101 certification, which demonstrates compliance with minimum performance criteria.

Evaluating Window Performance

Energy/thermal, structural and envelope standards can all be evaluated in some capacity through testing. First, a series of laboratory tests establishes the performance baseline, through both manufacturer/fabricator qualification testing and also performance mockups, or window units constructed solely for the purpose of laboratory testing, to ensure their ability to meet specified standards and requirements. Depending upon project specifications, samples and visual mock-ups might also be incorporated into the submittal process to better evaluate window appearance, including review of materials, finishes, profiles, and sight lines, before installation. This is especially critical with historic replacement projects, to verify that replacement windows match original or landmark conditions.

If one or more laboratory tests fail, or if appearances are not satisfactory, then mock-ups may be modified as required to achieve acceptable results. Then, such modifications are incorporated into the final design and manufactured windows. Once windows have been fully installed and sealed into their respective facade openings,



Visual mock-ups are useful in historic window projects for verifying aesthetics.



For this landmark military building, window security was a top replacement consideration.

they may also be subject to in-situ/ field testing to further evaluate their ability to meet performance requirements, and the extent to which the complete fenestration assembly can meet specified criteria, not just independent window units. Typically, such on-site evaluation includes additional air and water testing, with some accounting for field conditions.

How Are the Principles Applied?

Industry standards and code requirements are well established for new windows; however, when it comes to applying these performance criteria to historic window replacement and repair projects, it can be more challenging, especially for projects with special considerations.

Replacement Projects

One example that illustrates these complexities is a window replacement project conducted at a turn-of-the century National Historic Landmark armory building in a large metropolitan area. The project included comprehensive replacement of all original, deteriorated windows, but, since the building serves as an active military facility, the client required that the replacement windows meet contemporary performance standards, including energy code and anti-terrorism blast resistance.

The windows to be replaced were old-growth softwood, and although the historically appropriate replacements could not achieve the same thermal performance as metal windows with thermal breaks, the new mahogany hardwood frames offered better performance than non-thermally-broken metal windows. The original glazing was single pane, so to achieve an acceptable U-factor, Insulating Glazing Units (IGU) were used, or two lites (panes) of glass separated by an air cavity. To accommodate the IGUs, which are larger and heavier than the original single-pane units, the wood frame needed to increase in depth and weight. Fortunately, the replacement window frames were able to achieve the same overall exterior appearance, and accommodate required operating hardware, in a manner that was acceptable to the State Historic Preservation Office.

To further increase energy efficiency, a *Low-E (emissivity) coating* was incorporated into the IGU assembly. These coatings limit the amount of ultraviolet light that can pass through the glass, reducing the greenhouse effect on the building interior. However, it should be noted that some high-performing




▲ Flood debris testing of a proposed window assembly.

Low-E coatings can produce a colored tint, which may not be a desirable appearance for historic buildings, and, therefore, coating selection should be carefully considered. As with SHGC and VLT ratings, there can be situations where not using Low-E coatings may be desirable, to increase the potential for passive heating.

Even more challenging was the need to meet anti-terrorism blastresistant standards. All the replacement windows and glazing needed to be able to resist a shock wave from explosions or other ballistic forces at the exterior of the building. To achieve the requisite blast resistance, the IGUs incorporated layers of poly-vinyl-butyl (PVB) plastic lamination, the same material used in car windshields. In this project, the lamination was applied to the inside surface of each glass pane of the IGU, creating what is known as a double-laminated IGU. For singlelaminated assemblies, lamination can be applied to either the interior or the exterior lite. Double lamination maximized the glazing's resistance to lateral forces, as demonstrated by subjecting window performance mockups to laboratory-based shock tube testing, where the designed windows were evaluated for their ability to meet

specified blast loads.

In addition to the glazing assembly, the anchorage also required special attention, as any lateral forces to which the IGUs are subject will be transferred through the frames to the surrounding masonry walls. A series of epoxy adhesive anchors were originally considered for use due to their high strength, but

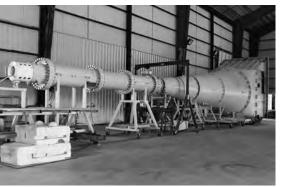

▲ Shock tube apparatus for blast resistance window testing.

given the position of the windows within the masonry walls, as well as the anticipated design pressures, epoxy anchorage was not employed because it could not achieve manufacturer-specified minimum edge distances, or the smallest allowable distance between anchors and the outer edge of the masonry. Instead, closely spaced mechanical anchors were ultimately specified, which are both suitable to the masonry substrate and able to achieve structural requirements.

Another example of the unique challenges of windows within historic buildings is a project where a series of storefronts were installed at a large commercial building. In this case, the windows were not replacements, but were new metal windows and doors installed in original loading deck entrances throughout the ground floor of a former warehouse, as part of an adaptive reuse project. Since the loading docks were originally open without solid doors, and the building is a landmark, the design team opted for large expanses of storefront glass with as few intermediate supports as possible to preserve the original building profile. However, the building is located in a low-lying coastal area, so flood resistance and the potential for glazing deflection when subject to flood loading were both critical considerations. Therefore, it was necessary to understand the stresses imposed

(continued on page 6)

Window Performance Testing

While contractors or manufacturers may refer to a window as having been "tested" in accordance with AAMA standards, building owners should note that the code only mandates *qualification testing*, which is performed on a manufacturer's sample unit to demonstrate that the typical unit produced in similar configurations will meet the required thresholds. This type of testing is what allows a window to be designated as a certain AAMA performance class, such as "LC" or "AW."

Code-compliant qualification and labeling of a window system is a general certification and does not guarantee that a specific window unit will meet performance standards in a given installation. Although not required by building code, best practice standards for projectspecific **performance testing** of window assemblies may be included in a window replacement project.

Testing confirms the design intent and level of performance and can provide quality assurance during construction. There are two types of performance testing commonly specified for window projects: off-site testing that occurs before construction, and on-site field testing that occurs during construction. While similar in the performance metrics they are capturing, the methodologies and setups differ.

Off-Site Testing

Also referred to as a *performance mock-up (PMU)*, off-site testing is usually carried out at an architectural testing laboratory. The parameters of a PMU are set by the proj-



▲ Water test of newly installed window.

ect specifications to follow the procedures of AAMA 101: North American Fenestration Standard/ Specification; the design professional may elect to test a single typical unit or multiple configurations. A general test program includes multiple tests for water penetration (ASTM E 547 and/



In the field: Spray rack water test of a rehabilitated historic window.



▲ In the lab: Wind and water test preparation for a window PMU.

or E 331), air infiltration (ASTM E 283), and structural performance (ASTM E 330). Additional tests may be specified depending on project requirements, such as life-cycle testing or lateral force (earthquake resistance). Tests may be repeated after each other to determine if air infiltration, for example, increases after the window is loaded with the maximum structural pressure. The PMU generally represents testing the "best-case" scenario for any installation, since it is a controlled and easily accessible setup in a lab.

Field Testing

During construction, on-site tests provide quality assurance. The general procedure for construction testing should follow AAMA 502: Voluntary Specification for Field Testing of Newly Installed Fenestration. Testing consists of visual assessment of seals, alignment, and window operation, as well as air and water infiltration tests according to the standards of ASTM E 783 and E 1105, respectively. The project designer must determine the number and frequency of field tests, as well as passing thresholds for the specific metrics; it is not sufficient to only reference "test according to AAMA 502" in the specifications.

(continued from page 4)

on the glass and the maximum span it could achieve.

To verify engineering calculations, *flood* resistance laboratory testing was performed, including *flood debris testing*, which evaluates the ability of windows to withstand large debris carried by fast-moving flood waters via impact loading, and also hydrostatic pressure testing, which measures the pressure of flood waters on glazing in a controlled chamber. To achieve passing results, it was again necessary to use laminated glazing in the storefront itself, as well as within the glass fin-wall system which was used to structurally support the glass. The fin-wall system consists of a series of vertical glass fins, which run perpendicular to the glass storefront, directly behind it at the interior side, attached only by a very thin vertical line of structural silicone sealant. Glass fins were used in lieu of vertical metal mullions to enhance the appearance of openness and minimize visual obstructions within the storefront system. Alternative and/or supplemental means of flood resistance measures were also considered, such as flood barriers or gates. This typically consists of metal posts and panels which would be securely anchored to facades or in the ground and requires a trained staff capable of rapidly deploying the system before an anticipated flood event.

Other considerations in historic window projects include general security concerns, as well as fire rating requirements. At a recent project at an urban library, determining whether wire mesh glass, security guards, or integrated vandal guards were most appropriate was a primary design concern. For lot line windows, stair towers, and fire-rated wall assemblies, steel-framed fire-rated windows might be specified, despite historical accuracy considerations, to comply with fire code requirements.

Repair Projects

While high performance standards often can be achieved in some capacity in window replacement projects within historic buildings, it can be even more delicate and difficult an exercise in window repair projects. One example of what can potentially be accomplished is demonstrated in the restoration of an early 20th century bronze-framed stained-glass window at a utility headquarters. The large ornamental window on the entry facade showed numerous signs of deterioration, and forensic in-situ water penetration testing, using an exterior spray rack which mimics wind-driven rain,



Documenting and reconstructing stainedglass mosaics is painstaking work.

confirmed that the window leaked and required extensive work. Given that much of the decorative glass and bronze frame components were in good condition, and that the window could be considered a priceless artwork, the project team decided to fully restore the window, rather than replace it. The window was carefully disassembled, salvaged, and brought to a studio certified by the Stained Glass Association of America. This allowed for the cleaning and archival documentation of each component, which would also facilitate replacement should pieces become damaged during restoration.

Historic stained glass is typically held in place by thin lead components

called *cames*, which are H-shapes for middle section pieces and C-shapes for edge pieces. All lead cames were replaced and resealed to the adjacent stained glass with a linseed oil-based waterproofing cement. Over time, as this cement deteriorates, windows are often temporarily repaired with elastomeric sealant, but when maintaining historic windows, it is essential to use a sealant which is compatible with the original materials. Following restoration, the window was reinstalled, and although the performance and operability do not conform to contemporary standards, they are much improved.

When evaluating alternative methods for addressing deteriorated historic windows or attempting to improve their performance, the use of protective glazing or storm windows are often considered, especially when replacement or full restoration is cost-prohibitive. Protective glazing is commonly installed at the building exterior, over existing stained-glass windows, to reduce air and water infiltration. However, if such exterior glazing is not properly ventilated, hot air and condensation can become trapped in the air cavity between the interior and exterior glazing and can further deteriorate the already distressed window. Metal components can become corroded and displaced, glass can crack and become dislodged, and additional leaks may be generated. The use of engineered storm windows, on the other hand, especially when installed at the interior side, can be an effective means of improving both the energy/ thermal and envelope performance of historic windows. Nonetheless, design professionals and storm window manufacturers should be consulted to evaluate the best approach, as each window repair situation presents its own unique problems.

(continued on page 8)

representative projects

Historic Window Rehabilitation

For more than 40 years, Hoffmann Architects has guided clients in finding the right solution for historic windows, from nineteenth century stained glass to midcentury steel. Our architects and engineers evaluate existing conditions, including anchorage, hardware, wall opening, frame, sealants, coatings, and glazing, and determine the best approach to balance historic integrity with modern performance. Our window projects at historic structures include:

Aquarion Water Company (1931) Bridgeport, Connecticut Restoration of Bronze-Framed Stained-Glass Windows

Countee Cullen Library (1941) New York, New York Building Envelope Rehabilitation and Window Replacement

Saint Bridget's Church (1887) Jersey City, New Jersey Building Enclosure and Window Consultation



Packer Memorial Church (1885), Lehigh Univ., Bethlehem, Penn., Masonry Restoration and Window Replacement/Rehabilitation.

Lexington Armory (1906) New York, New York Window Replacement

Ryan Hall (1903), Hawkins Hall (1833) Georgetown University Washington, District of Columbia Exterior Restoration, Window Repairs

Saint Fidelis Church (1894) College Point, New York Restoration of Steel-Framed Stained-Glass Windows

Jenkins-Waggoner Laboratory (1936) CT Agricultural Experiment Station New Haven, Connecticut Wood-Framed Window Replacement

Flagg Building, Corcoran School of the Arts & Design (1897) The George Washington University Washington, District of Columbia Building Envelope and Window Rehabilitation

15 West 12th Street (1959) New York, New York Analysis of Cold-Rolled Steel Windows

Rainbow Room, 30 Rockefeller Plaza (1933), Rockefeller Center New York, New York Window Replacement

The Washburn Shops (1868) Worcester Polytechnic Institute Worcester, Massachusetts Dormer Window, Slate Roof, and Tower Rehabilitation

Arts and Industries Building (1879) Smithsonian Institution Washington, District of Columbia Window Restoration United States Capitol (1829/1866) Washington, District of Columbia Dome Window Restoration

Scholastic Inc. Headquarters (1889) New York, New York Landmark Window Rehabilitation

Old Town Hall (1905) Stamford, Connecticut Exterior Restoration and Window Replacement

Tower Court Complex (1915-30) Wellesley College Wellesley, Massachusetts Building Envelope and Window Rehabilitation

Bellarmine Hall (1920) Fairfield University Fairfield, Connecticut Window, Facade, Roof, and Terrace Restoration

Benton Museum of Art (1920) University of Connecticut Storrs, Connecticut Exterior Restoration and Window Replacement



☐ Former Southern New England Telephone Headquarters (1938), New Haven, Conn., Steel Window Refurbishment.

Hoffmann Architects, Inc. 2321 Whitney Avenue Hamden, CT 06518

ADDRESS SERVICE REQUESTED



(continued from page 6)

Balancing Performance with Historic Integrity

With historic window projects, it is important to understand limitations and trade-offs. While it may not be possible to realize all aspects of the desired aesthetic and performance, each project is governed by different dominant criteria, allowing achievement of salient



This bronze-framed Art Deco window was removed, restored, and re-installed.

goals while making necessary compromises. Unfortunately, there is no perfect window that lasts forever, and ongoing inspection and maintenance will always be required. In particular, maintaining sealant joints and finishes is critical, as they are the first line of defense.

Historic restoration is dependent upon the availability of materials, as well as the properties and characteristics of the existing assembly, the surrounding structure, and repair and replacement components. Certain materials and forms may no longer be produced. Existing framing and attachment elements may not be able to support replacement glazing. Original materials may not perform as necessary to meet code requirements. These and a host of other considerations mean that historic window repair or replacement is rarely straightforward. Understanding how to prioritize project requirements and evaluate available options, as well as how to test and adjust the design to improve performance and aesthetics, are key to a successful project outcome.

JOURNAL is a publication of Hoffmann Architects, Inc., specialists in the rehabilitation of building exteriors. The firm's work focuses on existing structures, diagnosing and resolving problems within roofs, facades, windows, waterproofing materials, structural systems, plazas/terraces, parking garages, and historic and landmark structures. We also provide consulting services for new building construction, as well as litigation and claim support.

For address changes, free subscriptions, or information on the topics discussed in this issue, contact our Marketing Department at 800-239-6665, news@hoffarch.com, or:

2321 Whitney Avenue Hamden, CT 06518 203-239-6660

1040 Avenue of the Americas, Ste. 14C New York, NY 10018 212-789-9915

2711 Richmond Highway, Ste. 333 Arlington, VA 22202 703-253-9800

www.hoffarch.com

Editor/Production: Alison Hoffmann



JOURNAL offers AIA/CES Learning Units Earn Health, Safety, and Welfare (HSW) continuing education credit for reading the JOURNAL. To learn more, visit www.hoffarch.com.